

PROJECT	CUSTOMER	VEHICLE
Xtrapolis-PRASA	PRASA	218 – M2 – VPT

RTR Vehicle Pre-Testing TS218 M2 Report
GIB0000006350



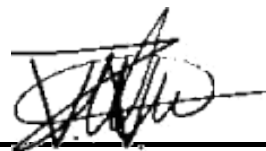
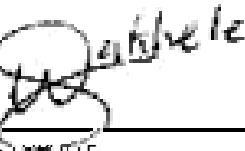
	CREATED	VERIFIED	APPROVED	DISTRIBUTION
Name	Vusumuzi ZULU	Sifiso LUKHELE	Kgomotso NKOANA	Confidentiality Category <i>Restricted</i> <i>Project</i> <i>Normal</i> ☐ ☐ ☒
Date	24/04/2024	24/04/2024	24/04/2024	Control Category <i>Controlled</i> <i>Not Controlled</i> ☒ ☐
Signature				Language EN

This report has been automatically generated from TES version 1

Table of modifications

Rev	Date	Modifications Content	Writer
A0	24/04/2024	Creation	Vusumuzi ZULU

Internal validations

	Name	Function	Date	Signature
Creator	Vusumuzi ZULU	EPU Manager	24/04/2024	X  Vusumuzi ZULU EPU Manager
Verifier	Sifiso LUKHELE	Serial Test Manager	24/04/2024	X  Sifiso LUKHELE Serial Test Manager
Approver	Kgomotso NKOANA	Test Expert	24/04/2024	X  Kgomotso NKOANA Test Expert

Execution Plan

Start Date	18/04/2024
End Date	18/04/2024



Contents

Section 1 - Purpose / Objectives

Section 2 - Protective Bonding and Return Current

2.3 Instructions list

Section 3 - Traction Motors

3.3 Instructions list

Section 4 - Config

4.3 Instructions list

Section 5 - Reflectometry

5.3 Instructions list

Section 6 - Report summaries

6.2 Results status

6.3 Tools used



Serial Tests Report
TS218 – M2 -VPT
RTR Vehicle Pre-Testing Report

Document Reference
GIB0000006350
Version: A0

Emission date
24/04/2024

Section 1 – Purpose / Objectives



Serial Tests Report TS218 – M2 -VPT RTR Vehicle Pre-Testing Report	Document Reference GIB0000006350 Version: A0	Emission date 24/04/2024
--	--	-----------------------------

Section 2 – Protective Bonding and Return Current

2.3 Instructions list

2.3.1 012_PB-Protective Bonding and Return Current

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Return Circuit: Car Body to Ground		OK		Paseka Ditlhakanyane - 491468	M1
10002	I	The purpose of this test is to confirm that the car body of each car in the train is connected to ground via the earthing brush which will ensure that current from the overhead wire is returned to the substation without damage to equipment or risk of electric shock		OK		Paseka Ditlhakanyane - 491468	M1
10003	A	Use the Tool List to record the serial number of the Ohmmeter that will be used in this test		OK		Paseka Ditlhakanyane - 491468	M1
10004	A	Ensure that the current setpoint is 50A and voltage <50V (applicable for all impedance measurement) on the ohmmeter device to be used for the test.		OK		Paseka Ditlhakanyane - 491468	M1
10005	I	For all impedance measurements of the car body to ground the positive terminal shall be connected to the car body and the negative terminal to the rail		OK		Paseka Ditlhakanyane - 491468	M1
10006	I	For all other impedance measurements the positive terminal shall be connected to the tested subject and the negative terminal to the car body shell		OK		Paseka Ditlhakanyane - 491468	M1
10007	A	Visually identify and inspect that the earthing cables of the 1st and 2nd axle of the 1st and 2nd Bogie Frame are properly connected to the axle brushes		OK		Paseka Ditlhakanyane - 491468	M1
10008	A	Disconnect from the axle box the earthing cable of the 1st and 2nd axle of the 1st and 2nd Bogie Frame of the M1 car		OK		Paseka Ditlhakanyane - 491468	M1
10009	R	All the earthing cables of the M1 car are disconnected		OK		Paseka Ditlhakanyane - 491468	M1
10010	A	Connect the earthing cable of the 1st axle in the 1st Bogie Frame		OK		Paseka Ditlhakanyane - 491468	M1

10011	R	Only the earthing cable of the 1st axle of the 1st Bogie Frame is connected		OK		Paseka Ditlhakanyane - 491468	M1
10012	A	Using an ohmmeter measure the impedance between the car body to rail		OK		Paseka Ditlhakanyane - 491468	M1
10013	R	Impedance Result Max : $x \leq 0.05$ (Ohms)		OK	0.0037	Paseka Ditlhakanyane - 491468	M1
10014	A	Disconnect the earthing cable of the 1st axle of the 1st bogie frame		OK		Paseka Ditlhakanyane - 491468	M1
10015	R	Earthing cable disconnected		OK		Paseka Ditlhakanyane - 491468	M1
10016	A	Connect the earthing cable of the 2nd axle in the 1st Bogie Frame		OK		Paseka Ditlhakanyane - 491468	M1
10017	R	Only the earthing cable of the 2nd axle of the 1st Bogie Frame is connected		OK		Paseka Ditlhakanyane - 491468	M1
10018	A	Using an ohmmeter measure the impedance between the car body to rail		OK		Paseka Ditlhakanyane - 491468	M1
10019	R	Impedance Result Max : $x \leq 0.05$ (Ohms)		OK	0.00387	Paseka Ditlhakanyane - 491468	M1
10020	R	Earthing cable disconnected		OK		Paseka Ditlhakanyane - 491468	M1
10021	A	Disconnect the earthing cable of the 2nd axle of the 1st bogie frame		OK		Paseka Ditlhakanyane - 491468	M1
10022	I	Earthing of Equipment on the Underframe		OK		Paseka Ditlhakanyane - 491468	M1
10023	A	Connect the earthing cable of the 1st axle in the 2nd Bogie Frame		OK		Paseka Ditlhakanyane - 491468	M1
10024	R	Only the earthing cable of the 1st axle of the 2nd Bogie Frame is connected		OK		Paseka Ditlhakanyane - 491468	M1
10025	A	Using an ohmmeter measure the impedance between the car body to rail		OK		Paseka Ditlhakanyane - 491468	M1
10026	R	Impedance Result Max : $x \leq 0.05$ (Ohms)		OK	0.0039	Paseka Ditlhakanyane - 491468	M1
10027	A	Disconnect the earthing cable of the 1st axle of the 2nd bogie frame		OK		Paseka Ditlhakanyane - 491468	M1
10028	R	Earthing cable disconnected		OK		Paseka Ditlhakanyane - 491468	M1
10029	A	Connect the earthing cable of the 2nd axle in the 2nd Bogie Frame		OK		Paseka Ditlhakanyane - 491468	M1

10030	R	Only the earthing cable of the 1st axle of the 2nd Bogie Frame is connected		OK		Paseka Ditlhakanyane - 491468	M1
10031	A	Using an ohmmeter measure the impedance between the car body to rail		OK		Paseka Ditlhakanyane - 491468	M1
10032	R	Impedance Result Max : $x \leq 0.05$ (Ohms)		OK	0.0036	Paseka Ditlhakanyane - 491468	M1
10033	A	Reconnect all earthing cables of the 1st and 2nd axle of the 1st and 2nd Bogie Frame		OK		Paseka Ditlhakanyane - 491468	M1
10034	R	All earthing cables connected on the 1st and 2nd Bogie Frame		OK		Paseka Ditlhakanyane - 491468	M1
10035	A	Visually inspect that the earthing cable connecting the Traction Inverter Case to M1 car body is properly connected and related bolts are correctly torqued		OK		Paseka Ditlhakanyane - 491468	M1
10036	R	Traction Inverter Case visually grounded and torque is correctly marked		OK		Paseka Ditlhakanyane - 491468	M1
10037	A	Using an ohmmeter measure the impedance between the Traction Inverter Case and the car body		OK		Paseka Ditlhakanyane - 491468	M1
10038	R	Impedance Result Max : $x \leq 0.05$ (Ohms)		OK	0.004	Paseka Ditlhakanyane - 491468	M1
10039	A	Visually inspect that the earthing cable connecting the Line Inductor Case to M4 car body is properly connected and related bolts are correctly torqued		OK		Paseka Ditlhakanyane - 491468	M1
10040	R	Line Inductor Case visually grounded and torque is correctly marked		OK		Paseka Ditlhakanyane - 491468	M1
10041	A	Using an ohmmeter measure the impedance between the Line Inductor Case and the car body		OK		Paseka Ditlhakanyane - 491468	M1
10042	R	Impedance Result Max : $x \leq 0.05$ (Ohms)		OK	0.0037	Paseka Ditlhakanyane - 491468	M1
10043	A	Visually inspect that the earthing cable connecting the Traction Motors of the 1st and 2nd axle of the 1st Bogie Frame to the car body is properly connected and related bolts are correctly torqued		OK		Paseka Ditlhakanyane - 491468	M1
10044	R	Traction Motors visually grounded and torque is correctly marked		OK		Paseka Ditlhakanyane - 491468	M1

10045	A	Using an ohmmeter measure the impedance between the Traction Motors of the 1st and 2nd axle of the 1st Bogie Frame and the car body		OK		Paseka Ditlhakanyane - 491468	M1
10046	R	Impedance Result Max : $x \leq 0.05$ (Ohms)		OK	0.0037	Paseka Ditlhakanyane - 491468	M1
10047	A	Visually inspect that the earthing cable connecting the Traction Motors of the 1st and 2nd axle of the 2nd Bogie Frame to the car body is properly connected and related bolts are correctly torqued		OK		Paseka Ditlhakanyane - 491468	M1
10048	R	Traction Motors visually grounded and torque is correctly marked		OK		Paseka Ditlhakanyane - 491468	M1
10049	A	Using an ohmmeter measure the impedance between the Traction Motors of the 1st and 2nd axle of the 2nd Bogie Frame and the car body		OK		Paseka Ditlhakanyane - 491468	M1
10050	R	Impedance Result Max : $x \leq 0.05$ (Ohms)		OK	0.0045	Paseka Ditlhakanyane - 491468	M1
10051	I	Earthing of Equipment on the Roof		OK		Paseka Ditlhakanyane - 491468	M1
10052	A	Visually inspect that the earthing cable connecting the 1st Braking Resistor Box to M1 car body is properly connected and related bolts are correctly torqued		OK		Paseka Ditlhakanyane - 491468	M1
10053	R	1st Braking Resistor Box visually grounded and torque is correctly marked		OK		Paseka Ditlhakanyane - 491468	M1
10054	A	Using an ohmmeter measure the impedance between the 1st Braking Resistor Box and the car body		OK		Paseka Ditlhakanyane - 491468	M1
10055	R	Impedance Result Max : $x \leq 0.05$ (Ohms)		OK	0.0036	Paseka Ditlhakanyane - 491468	M1
10056	A	Visually inspect that the earthing cable connecting the Saloon HVAC to M1 car body is properly connected and related bolts are correctly torqued		OK		Paseka Ditlhakanyane - 491468	M1
10057	R	Saloon HVAC visually grounded and torque is correctly marked		OK		Paseka Ditlhakanyane - 491468	M1
10058	A	Using an ohmmeter measure the impedance between the Saloon HVAC and the car body		OK		Paseka Ditlhakanyane - 491468	M1
10059	R	Impedance Result Max : $x \leq 0.05$ (Ohms)		OK	0.0037	Paseka Ditlhakanyane - 491468	M1

10060	A	Visually inspect that the earthing cable connecting the 2nd Braking Resistor Box to M1 car body is properly connected and related bolts are correctly torqued		OK		Paseka Ditlhakanyane - 491468	M1
10061	R	2nd Braking Resistor Box visually grounded and torque is correctly marked		OK		Paseka Ditlhakanyane - 491468	M1
10062	A	Using an ohmmeter measure the impedance between the 2nd Braking Resistor Box and the car body		OK		Paseka Ditlhakanyane - 491468	M1
10063	R	Impedance Result Max : $x \leq 0.05$ (Ohms)		OK	0.004	Paseka Ditlhakanyane - 491468	M1



Serial Tests Report TS218 – M2 -VPT RTR Vehicle Pre-Testing Report	Document Reference GIB0000006350 Version: A0	Emission date 24/04/2024
--	--	-----------------------------

Section 3 – Traction Motors

3.3 Instructions list

3.3.1 011_TRM-Traction Motors

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Traction Motors (SPP = 11)		OK		Mlungisi Madela - 529927	M1
10002	I	Ensure all the CONNECTORS are fully ASSEMBLED before running a continuity test.		OK		Mlungisi Madela - 529927	M1
10003	I	The following test is used to confirm the wiring of the traction motors.		OK		Mlungisi Madela - 529927	M1
10004	I	SAFETY NOTICE: It is important to ensure that there is no 400Vac power supply on the vehicle.		OK		Mlungisi Madela - 529927	M1
10005	A	Switch OFF the 400Vac power supply at the source and disconnect the supply cables from the vehicle		OK		Mlungisi Madela - 529927	M1
10006	R	There is no 400Vac available on the vehicle		OK		Mlungisi Madela - 529927	M1
10007	I	Visual Inspection		OK		Mlungisi Madela - 529927	M1
10008	I	For motor 1 and motor 2 connect 11XR1 and 11XR2 and visually inspect that the following cables are connected. From - 11XR1 connector to -11M1 motor and - 11XR2 connector to -11M2 motor respectively. NOTE: the cable configuration should be straight, none should cross the other.		OK		Mlungisi Madela - 529927	M1
10009	I	Motor 2		OK		Mlungisi Madela - 529927	M1
10010	R	[-11XR2 connector (local: UND - 11XP2_2.X1 pin 1)] connected to: [- 11XT2 motor terminals (U) -11M2].		OK		Mlungisi Madela - 529927	M1
10011	R	[-11XR2 connector (local: UND - 11XP2_2.X2 pin 1)] connected to: [- 11XT2 motor terminals (V) -11M2].		OK		Mlungisi Madela - 529927	M1
10012	R	[-11XR2 connector (local: UND - 11XP2_2.X3 pin 1)] connected to: [- 11XT2 motor terminals (W) -11M2].		OK		Mlungisi Madela - 529927	M1

10013	R	-11M2 Motor terminals PE connected to -11GND2.		OK		Mlungisi Madela - 529927	M1
10014	I	Motor 1		OK		Mlungisi Madela - 529927	M1
10015	R	[-11XR1 connector (local: UND - 11XP1_2.X1 pin 1)] connected to: [-11XT1 motor terminals (U) -11M1].		OK		Mlungisi Madela - 529927	M1
10016	R	[-11XR1 connector (local: UND - 11XP1_2.X2 pin 1)] connected to: [-11XT1 motor terminals (V) -11M1].		OK		Mlungisi Madela - 529927	M1
10017	R	[-11XR1 connector (local: UND - 11XP1_2.X3 pin 1)] connected to: [-11XT1 motor terminals (W) -11M1].		OK		Mlungisi Madela - 529927	M1
10018	R	-11M1 Motor terminals PE connected to -11GND1.		OK		Mlungisi Madela - 529927	M1
10019	I	Visual Inspection		OK		Mlungisi Madela - 529927	M1
10020	I	For motor 3 and motor 4 connect 11XR3 and 11XR4 and visually inspect that the following cables are connected. From -11XR3 connector to -11M3 motor and -11XR4 connector to -11M4 motor respectively. NOTE: the cable configuration should be straight, none should cross the other		OK		Mlungisi Madela - 529927	M1
10021	I	Motor 3		OK		Mlungisi Madela - 529927	M1
10022	R	[-11XR3 connector (local: UND - 11XP3_2.X1 pin 1)] connected to: [-11XT3 motor terminals (U) -11M3].		OK		Mlungisi Madela - 529927	M1
10023	R	[-11XR3 connector (local: UND - 11XP3_2.X2 pin 1)] connected to: [-11XT3 motor terminals (V) -11M3].		OK		Mlungisi Madela - 529927	M1
10024	R	[-11XR3 connector (local: UND - 11XP3_2.X3 pin 1)] connected to: [-11XT3 motor terminals (W) -11M3].		OK		Mlungisi Madela - 529927	M1
10025	R	-11M3 Motor terminals PE connected to -11GND3		OK		Mlungisi Madela - 529927	M1
10026	I	Motor 4		OK		Mlungisi Madela - 529927	M1
10027	R	[-11XR4 connector (local: UND - 11XP4_2.X1 pin 1)] connected to: [-		OK		Mlungisi Madela - 529927	M1

		11XT4 motor terminals (U) -11M4].					
10028	R	[-11XR4 connector (local: UND - 11XP4_2.X2 pin 1)] connected to: [- 11XT4 motor terminals (V) -11M4].		OK		Mlungisi Madela - 529927	M1
10029	R	[-11XR4 connector (local: UND - 11XP4_2.X3 pin 1)] connected to: [- 11XT4 motor terminals (W) -11M4].		OK		Mlungisi Madela - 529927	M1
10030	R	-11M4 Motor terminals PE connected to - 11GND4.		OK		Mlungisi Madela - 529927	M1

Section 4 – Config

4.3 Instructions list

4.3.1 CONFIG-Vehicle Configuration

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Configuration Checks		OK		Thandanani Makhanya - 463827	M1
10002	A	Check continuity on all pins of End 1 connector 90XP15 & 90XP14 to ground		OK		Thandanani Makhanya - 463827	M1
10003	R	There is no continuity		OK		Thandanani Makhanya - 463827	M1
10004	A	Check continuity on all pins of End 2 connector 90XP15 & 90XP14 to ground		OK		Thandanani Makhanya - 463827	M1
10005	R	There is no continuity		OK		Thandanani Makhanya - 463827	M1
10006	I	Fire Detection_67		OK		Thandanani Makhanya - 463827	M1
10007	I	Smoke Detector Address Configuration		OK		Thandanani Makhanya - 463827	M1
10008	A	Remove and configure the Smoke Detector 67A2 (+PA1) according to the figure attached.		OK		Thandanani Makhanya - 463827	M1
10009	A	Reconnect Smoke Detector 67A2		OK		Thandanani Makhanya - 463827	M1
10010	A	Remove and configure the Smoke Detector 67A3 (+PA3) according to the figure below		OK		Thandanani Makhanya - 463827	M1
10011	I	Line Heat Detection		OK		Thandanani Makhanya - 463827	M1
10012	A	Measure the resistance between point 1 and point 4 of the connector 67XP3_11		OK		Thandanani Makhanya - 463827	M1
10013	R	About 600 Ohms measured		OK		Thandanani Makhanya - 463827	M1
10014	A	Reconnect Smoke Detector 67A3		OK		Thandanani Makhanya - 463827	M1

10015	I	OTDR LOOP		OK		Thandanani Makhanya - 463827	M1
10016	I	Check continuity on the following points:		OK		Thandanani Makhanya - 463827	M1
10017	A	From : [+IV1(local: +END1 Connector 90XR23.B(pin1))] to: [(local: +END2 Connector -93XR833.B (pin 1))]		OK		Thandanani Makhanya - 463827	M1
10018	A	From : [-IV1 (local: +END1 Connector 90XR23.B(pin2))] to: [(local: +END2 Connector -93XR833.B (pin 2))]		OK		Thandanani Makhanya - 463827	M1

Section 5 – Reflectometry

5.3 Instructions list

5.3.1 025_NET-Network Cabling Integrity

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Network Cabling Integrity Test		OK		Paseka Ditlhakanyane - 491468	M1
10002	I	It is necessary to check the network cables to ensure that they have been installed correctly to improve the overall operation of the system.		OK		Paseka Ditlhakanyane - 491468	M1
10003	I	The Cable Analyzer Module DSX-5000 will be used to validate cabling		OK		Paseka Ditlhakanyane - 491468	M1
10004	I	First time user should register as a new Operator on the DSX-5000. Check on the manual on how to register as a new Operator.		OK		Paseka Ditlhakanyane - 491468	M1
10005	I	When saving the tests results for each line, it should be named by its trainset number (X) and the test code (Indicated in the test step). i.e. TS021_M1_P01 for PACIS and TS021_M1_T01 for TCMS.		OK		Paseka Ditlhakanyane - 491468	M1
10006	I	TCMS cabling		OK		Paseka Ditlhakanyane - 491468	M1
10007	A	From: [25A10 SWITCH ETHERNET (CRS1) (Local: +LV3; Connector: 25XP10_X4)] to: [25A11 SWITCH ETHERNET (CRS2) (Local: +LV3; Connector: 25XP11_X3)] NOTE: Cable is crossed TSX_M1_T01		OK		Paseka Ditlhakanyane - 491468	M1
10008	A	From: [25A11 Ethernet Switch (Local: +LV3; Connector: 25XP11_X4)] to: [Intercar (Local: +END2; Connector: 90XP32.all)] NOTE: Cable is straight		OK		Paseka Ditlhakanyane - 491468	M1

		TSX_M1_T02					
10009	A	From: [25A14 TBR-M1 (Local: +LV3; Connector: 25XP14_ETH1)] to: [Intercar (Local: +END2; Connector: 90XP32.al)] NOTE: Cable is crossed TSX_M1_T03		OK		Paseka Ditlhakanyane - 491468	M1
10010	A	From: [25A10 Ethernet Switch (Local: +LV3; Connector: 25XP10_X5)] to: [(Local: +END2; Connector: 90XP31.el)] NOTE: Cable is crossed TSX_M1_T04		OK		Paseka Ditlhakanyane - 491468	M1
10011	A	From: [25A14 TBR-M1 (Local: +LV3; Connector: 25XP14_ETH0)] to: [Intercar (Local: +END1; Connector: 90XP21.al)] NOTE: Cable is crossed TSX_M1_T05		OK		Paseka Ditlhakanyane - 491468	M1
10012	A	From: [25A10 Ethernet Switch (Local: +LV3; Connector: 25XP10_X3)] to: [(Local: +END1; Connector: 90XP21.All)] NOTE: Cable is crossed TSX_M1_T06		OK		Paseka Ditlhakanyane - 491468	M1
10013	A	From: [(Local: +END1; Connector: 90XR22.All)] to: [Intercar (Local: +END2; Connector: 90XP31.al)] NOTE: Cable is straight TSX_M1_T07		OK		Paseka Ditlhakanyane - 491468	M1
10014	A	From: [(Local: +END1; Connector: 90XR22.All)] to: [Intercar (Local: +END2; Connector: 90XP31.al)] NOTE: Cable is straight TSX_M1_T08		OK		Paseka Ditlhakanyane - 491468	M1
10015	I	Pacis cabling		OK		Paseka Ditlhakanyane - 491468	M1
10016	A	From: [(Local: +END1; Connector: 90XR22.El)] to: [Intercar (Local: +END2; Connector: -90XP31.el)] NOTE: Cable is straight TSX_M1_P01		OK		Paseka Ditlhakanyane - 491468	M1
10017	A	From: [54A11 SWITCH ETHERNET (CRS2) (Local: +LV6; Connector: 54XP11_X8)] to: [(Local: +END1;		OK		Paseka Ditlhakanyane - 491468	M1

		Connector: 90XR21.ElI]] NOTE: Cable is straight TSX_M1_P02					
10018	A	From: [54A10 SWITCH ETHERNET (CRS1) (Local: +LV6; Connector: 54XP10_X7)] to: [(Local: +END2; Connector: 90XP32.elI)] NOTE: Cable is crossed TSX_M1_P03		OK		Paseka Ditlhakanyane - 491468	M1
10019	A	From: [54A10 CRS1 (Local:+LV6; Connector 54XP10_X8)] to: [54A11 CRS2 (Local:+LV6; Connector 54XP11_X7)] NOTE: Cable is crossed TSX_M1_P04		OK		Paseka Ditlhakanyane - 491468	M1
10020	A	All cables have been validated on M1		OK		Paseka Ditlhakanyane - 491468	M1
10021	R	Download all the results from Fluke and save them on PC with folder name "M1_TSxx"		OK		Ntobeko Ndlovu - 421595	M1

Section 6 – Report summaries

6.2 Results status

Test Instruction Sheet	Compliant	Incomplete	Non-compliant
Traction Motors	X		
Reflectometry	X		
Protective Bonding and Return Current	X		
Config	X		

6.3 Tools used

Function	Tool name	Tool number	Next Calibration date
012_PB	Megger	Megger	8/25/2025
025_NET	Cable Analyser DSX5000	Fluke machine_Ubunye	6/23/2024

Vehicle	Equipment	Expected version	Version loaded
M1			